


Refill Instructions: Canon BCI-62 Photo Cartridges

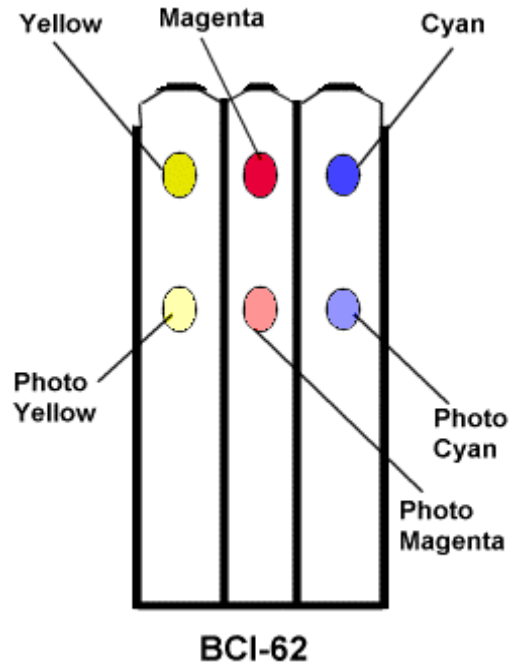

Preparation:

1. Remove BCI-62 Photo ink tank cartridge from printer.
2. Set the cartridge on a flat surface with plenty of newspaper underneath it. The 6 exit ports should be pointing up. The top row takes the standard colors and the bottom row takes the photo colors.

Refill:

1. Using the syringe in your kit, attach the needle and draw about 6 cc of ink into the syringe. The 2 oz bottle holds 60 cc.
2. Let the yellow ink drip onto the yellow exit port. Don't put more than 6 cc's in the front holes. Be careful that it does not over flow. When it has taken all of the 6 cc or won't take anymore ink, turn the cartridge upside down, and let any excess in drain off. Don't worry, the sponge will retain the correct amount.

3. After dripping stops, seal the port with black electrical tape to prevent contamination from other inks.
4. Put away the yellow ink, clean every thing with yellow ink on it with warm water. Set up the next bottle or syringe for the next color.
5. Repeat the above procedure for the magenta and cyan. Use 10 cc's for the photo yellow, photo magenta, and photo cyan inks. Make sure you put the right color ink in the correct exit port. Just a few drops of ink in the wrong port and the cartridge will be worthless.
6. When you are done, you can remove the tape from each exit port.
7. Let the cartridge sit for at least 15 minutes in its installed position (exit ports down) before re-installing in printer.
8. For storage, keep the exit ports taped shut with a couple of pieces of black electrical tape.